

MONTAGEANLEITUNG

 MONTAGEANLEITUNG
 ASSEMBLY INSTRUCTION
 DE INSTRUCTIE VAN DE ASSEMBLAGE
 ISTRUZIONE DELL'ASSEMBLEA
 INSTRUCCIÓN DE ASAMBLEA
 INSTRUCTION DE MONTAGE
 NÁVOD K MONTÁŽI
 MONTERINGSANVISNING

 MONTAJ TALIMATI
 ASENNUŠOJE
 BRUGSANVISNING
 BRUKSANVISNING
 UPUTE ZA MONTAŽU
 NAVODILA ZA MONTAŽO
 SZERELÉSI ÚTMUTATÓ
 INSTRUCTIUNI DE MONTAJ



Version 16.6

Modell-Nr.

12160

ART.-NR. FRONT KORPUS

12162

Rot
(ähnl. RAL 3002)

Silber

12167

Ultramarinblau
(RAL 5002)

Silber

12166

Silber

Schwarz
(RAL 9005)

Friedrich Küpper GmbH
 Friedrich-Küpper-Weg
 54570 Berlingen
 Deutschland

Telefon +49 (0) 65 91 - 95 42 0
 Telefax +49 (0) 65 91 - 95 42 17
 E-Mail info@friedrich-kuepper-gmbh.de
 Internet www.friedrich-kuepper-gmbh.de

EINZELTEILE / PIECES

1× **A**



1766 mm × 465 mm

Art.-Nr. E0527 (Silber/silver)

Art.-Nr. E0528 (Schwarz/black)

1× **B**



467 mm × 232 mm

Art.-Nr. E0529 (Silber/silver)

Art.-Nr. E0530 (Schwarz/black)


1× **C**



692 mm × 146 mm

Art.-Nr. E0531 (Silber/silver)

3× **D**

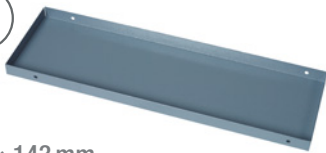

462 mm × 143 mm

Art.-Nr. E0533 (Silber/silver)

1× **E**



698 mm × 146 mm

Art.-Nr. E0537 (silber/silver)

Art.-Nr. E0535 (rot/red)

Art.-Nr. E0536 (blau/blue)

2× **X**



450 mm × 20 mm


Art.-Nr. E0789 (Schwarz/black)

1× **Y**




Art.-Nr. E0422 (Schwarz/black)

BEUTELINHALT / BAG CONTENT

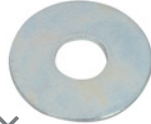 10× M5 x 10 mm Art.-Nr. E0286	 10× ø 5,3 mm Art.-Nr. E0287	 10× M5 Art.-Nr. E0288	 20× M4 x 10 mm Art.-Nr. E0289	 20× M4 Art.-Nr. E0290	 2× KU 4 x 16 mm Art.-Nr. E0285
 8× M8 Art.-Nr. E0295	 1× Art.-Nr. E0292	 1× Art.-Nr. E0291	 4× Art.-Nr. E0294	 4× ø 8,4 mm Art.-Nr. E0780	 4× 4,5 x 25 mm Art.-Nr. E0781

BENÖTIGTES WERKZEUG / NEEDED TOOLS

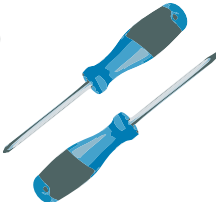1  PH 1 x 100 PH 2 x 100	2  SW 7 SW 8 SW 13
---	---


1.



2.

⊗
2× CL

⊗
2× CR

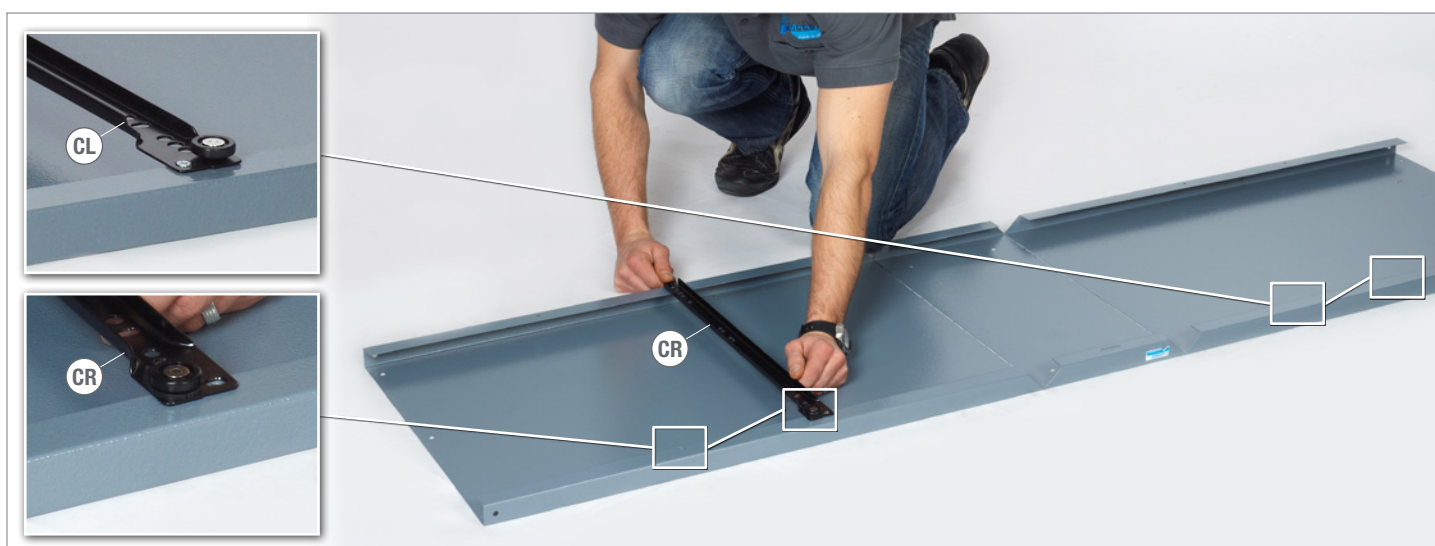

3.  8x M4  8x M4x10

②  SW 7 ①  PH 2x100



4.



5.



6.




7.  10× M5  10× M5×10  10× 5,3 MM

②  SW8 ①  PH2×100



8.  8× M8  4× 8,4 MM  10× 5,3 MM

②  SW 13

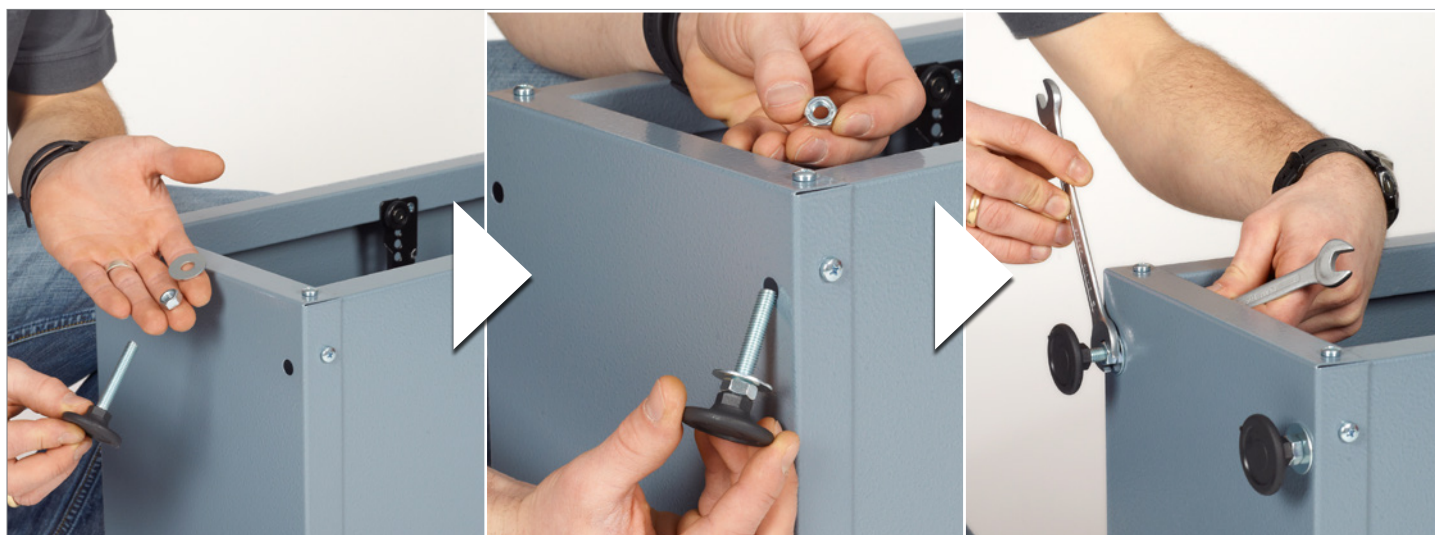

9.




10.

2x M4

2x M4 x 10

② SW 7

① PH1 x 100

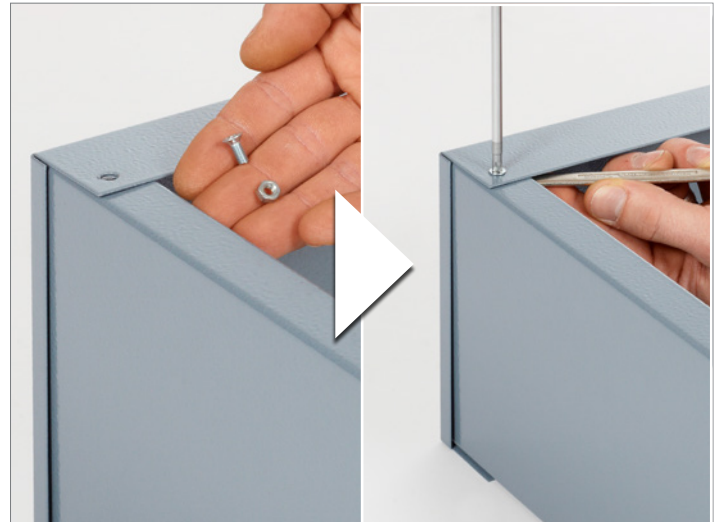

11.

2x M4

2x M4 x 10

② SW 7

① PH1 x 100



12.



13.


ⓧ
2× DL

Ⓜ
4× M4

ⓧ
4× M4 × 10

②
SW 7


①
PH1 × 100

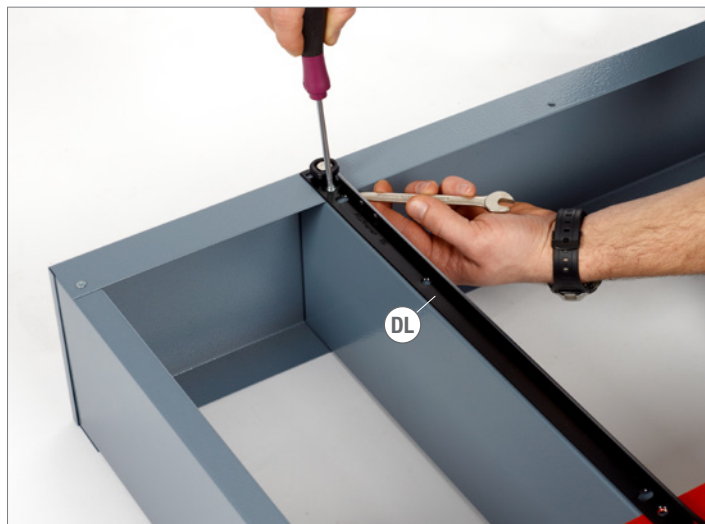

14.

②
SW 7

①
PH1 × 100

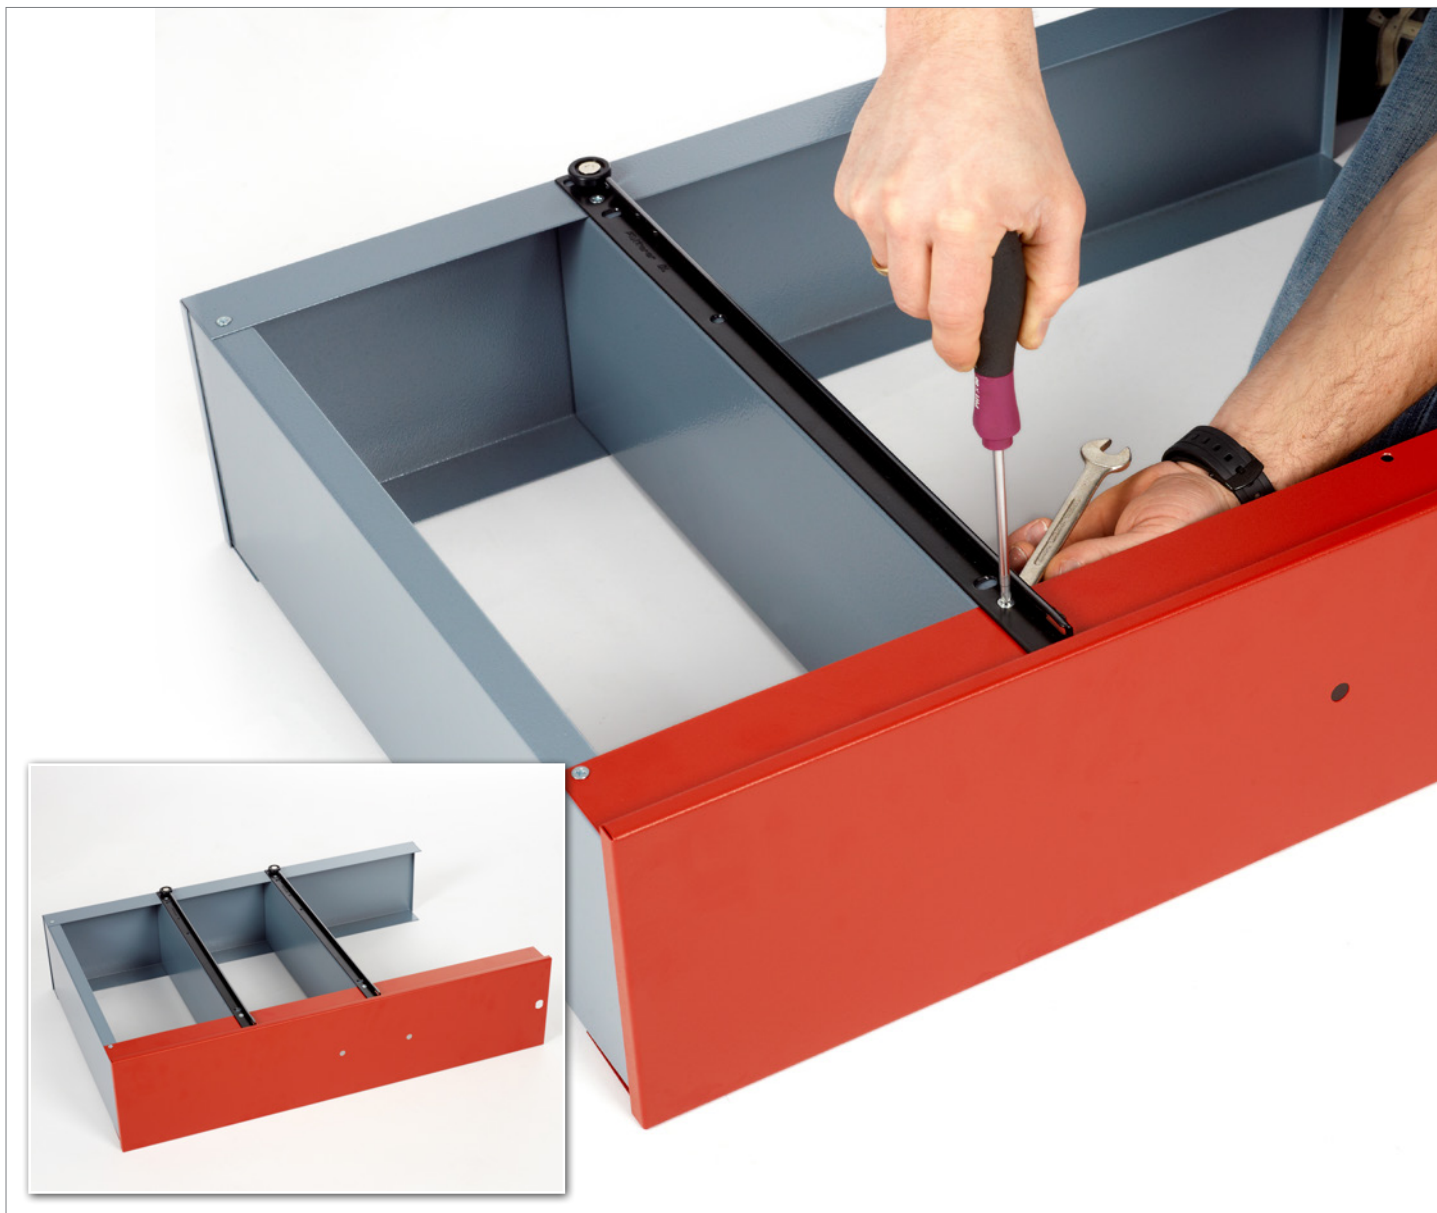

15.


4× M4

4× M4×10

2× DR

② SW 7

① PH 1×100

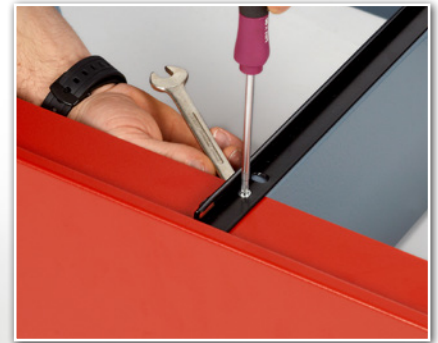

16.

2× KU4×16

1× Y

① PH 1×100



17.




18.




19.



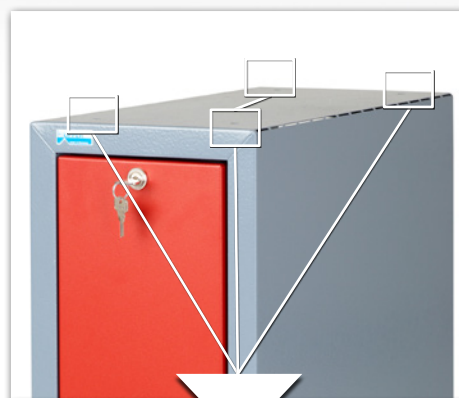

Durch den Einbauschränk anschrauben!
fix it through the cabinet!

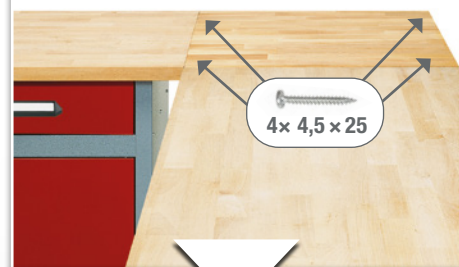

Modell-Nr.

12160